

Scanned to PDF

5 November

2013

From paper

held by:

Norman Ryan

TM 11-5820-358-34P

TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LISTS

RADIO RECEIVER R-390A/URR

5820-538-7555

HEADQUARTERS, DEPARTMENT OF THE ARMY
FEBRUARY 1972

TECHNICAL MANUAL }
 No. 11-5820-358-34P }

HEADQUARTERS
 DEPARTMENT OF THE ARMY
 WASHINGTON, D.C., 11 February 1972

Direct Support and General Support Maintenance
Repair Parts and Special Tools Lists
RADIO RECEIVER R-390A/URR
5820-538-7555
Current as of 1 March 1971

	Paragraph	Page
SECTION I. INTRODUCTION		
Scope	1	1
General	2	1
Explanation of columns	3	1
Special information	4	2.1
How to locate repair parts	5	2.1
Federal supply codes for manufacturers	6	2.1
Reporting of equipment publication improvements	7	2.1
II. REPAIR PARTS FOR DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE		4
III. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (NOT APPLICABLE)		
IV. INDEX—FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO FIGURE AND ITEM NUMBER		87
V. INDEX—REFERENCE DESIGNATION CROSS-REFERENCE TO PAGE NUMBER		118

LIST OF ILLUSTRATIONS

Number	Title	Page
1	Radio Receiver R-390A/URR	137
2	Radio Receiver R-390A/URR, top view	138
3	Radio Receiver R-390A/URR, bottom view	138
4	Unmodified IF. Subchassis, top view	139
5	IF. subchassis MOD I, Order No. 363-Phila-54 and all IF. subchassis on Order No. 14-Phila-56, top view	140
6	Unmodified IF. subchassis, bottom view, rear section	141
7	IF. subchassis, bottom view, front section	142
8	IF. subchassis, bottom view, front section	143
9	RF. subchassis, top view	144
10	RF. subchassis, bottom view, front section	145
11	RF. subchassis, bottom view, rear section	146
12	Crystal-oscillator subchassis, top view	147
13	Crystal-oscillator subchassis, bottom view	148
14	Crystal-oscillator subchassis, internal view of crystal oven	149
15	VFO subchassis, top view	149
16	VFO subchassis, bottom view	150
17	AF subchassis, top view	151
18	AF subchassis, bottom view	152
19	Power-supply subchassis, top view	153
20	Power-supply subchassis, bottom view	154
21	Antenna relay assembly, internal view	155
22	Radio Receiver R-390A/URR, front panel and interior of main frame	156
23	RF. gear train assembly, location of parts	157
24	Location of RF bandswitch shaft clamp, detent spring, and ten-turn stops	158
25	Oldham coupler details	159

*This manual supersedes TM 11-5820-358-35P, 20 March 1962, including all changes.